**Print on plain white paper - Part # 122919**

| NUMBER | CHANGE | TITLE | TOLERANCE UNLESS OTHERWISE SPECIFIED |
|---|---|---|---|
| TP1014 | C | INSTRUCTIONS, SOLENOID & PLUNGER REPLACEMENT (REF. 151586) | .0000 = +\- .005<br>.000 = +\- .010<br>.00 = +\- .03<br>SCALE |
| MATERIAL | | FINISH | |



EXPLODED VIEW (HALF SCALE)

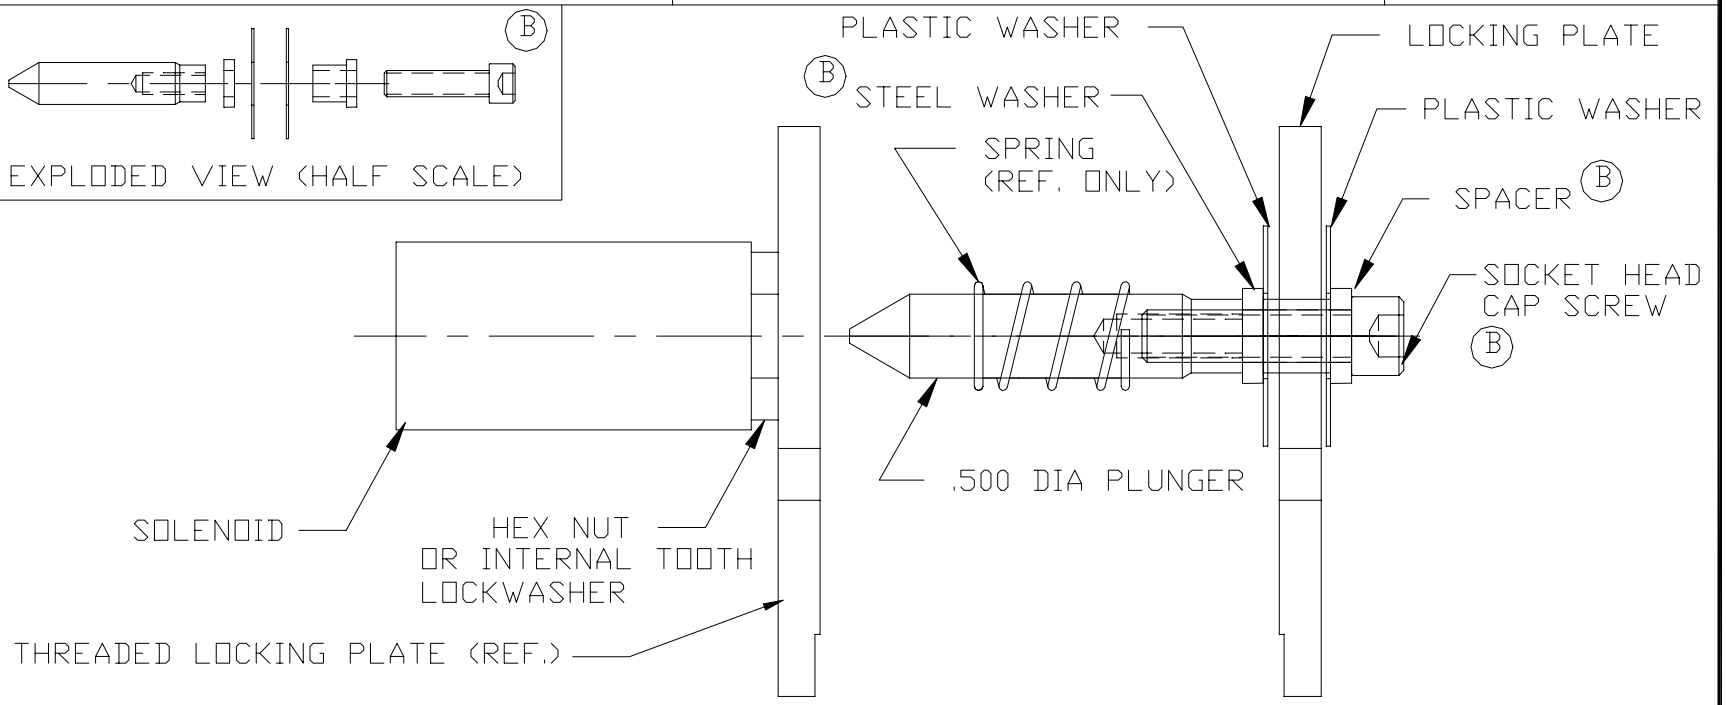


1-REMOVE RETAINING RING FROM END OF PLUNGER AND UNSCREW SOLENOID. REMOVE OLD PLUNGER AND SOLENOID

2-INSTALL NEW PLUNGER TO SLOTTED LOCKING PLATE USING WASHER, SPACER, SCREW, PLASTIC WASHERS AND EXISTING SPRING AS SHOWN ABOVE (NOTE: STAND SOLENOID DOES NOT HAVE A SPRING)

3-THREAD NEW SOLENOID WITH HEX NUT IN PLACE INTO THREADED LOCKING PLATE (NOTE: CHAIR SOLENOID SUPPLIED WITH HEX NUT, STAND SOLENOID WITH INTERNAL TOOTH LOCKWASHER)

4-PLUG IN NEW SOLENOID AND TEST OPERATION

CHANGES: RD 1518 (A) RD1650 10-23-92 (B) RD2246 6-23-98

| | DATE | DRAWN CEB | PRODUCT ENG. | QUALITY ASSUR. |
|---|---|---|---|---|
| Knight® by Midmark | MFG. REL. DATE | | MFG. ENG. | ENG. MGR. |


Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542